



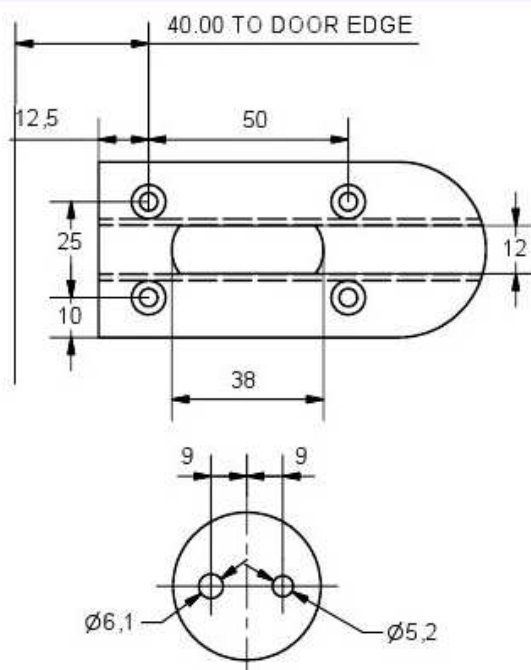

**PRODUCT SPECIFICATION FOR:
BH 1/7 WITH LARGE HANDLE**

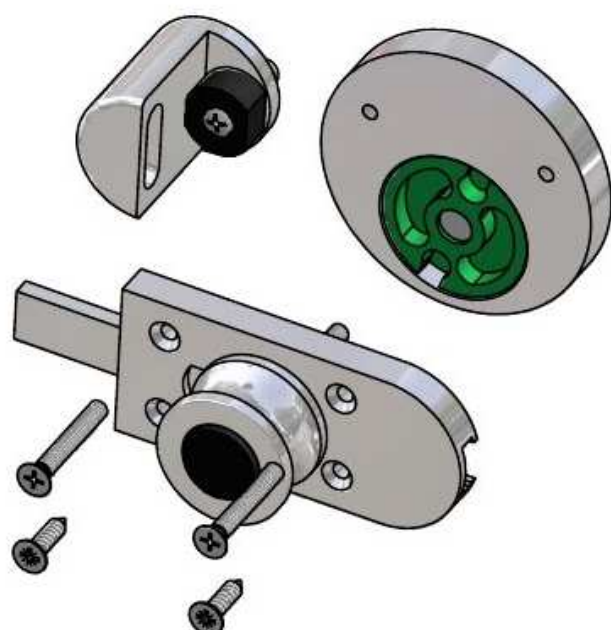

1. MARK OUT ALL HOLE CENTRES AS SHOWN ON DIAGRAM ABOVE.
2. ONCE ALL HOLES HAVE BEEN PRE DRILLED OFFER UP THE BOLT HOUSING AND FACE PLATE SECURING THE FACE PLATE TO THE BOLT HOUSING WITH THE M4 BOLTS PROVIDED, ALSO ENSURING THAT THE BOLT MECHANISM CORRESPONDS WITH THE SIGNAL.
3. USING THE TWO SELF TAPPING SCREWS PROVIDED SECURE THE BOTTOM TWO HOLES OF THE BOLT HOUSING TO THE DOOR.
4. CHECK FOR FREE MOVEMENT OF THE BOLT AND SIGNAL.
5. IF EVERYTHING MOVES FREELY THEN OFFER UP THE KEEP TO THE CORRECT POSITION ON THE FASCIA AND FIX IN PLACE WITH THE SCREW AND SCREWSERT PROVIDED.

Atlas Washroom Systems Ltd, Darlington Road, West Auckland
County Durham, DL14 9PD
T 01388-830830 F 01388-830831 E info@atlas-washrooms.co.uk