

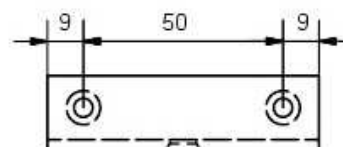


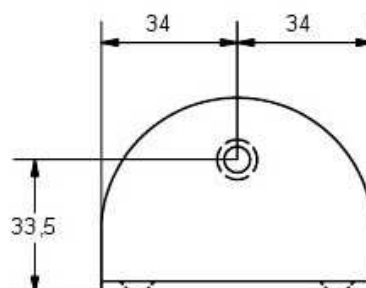

PRODUCT SPECIFICATION SHEET FOR:
WM3/6 BRACKET

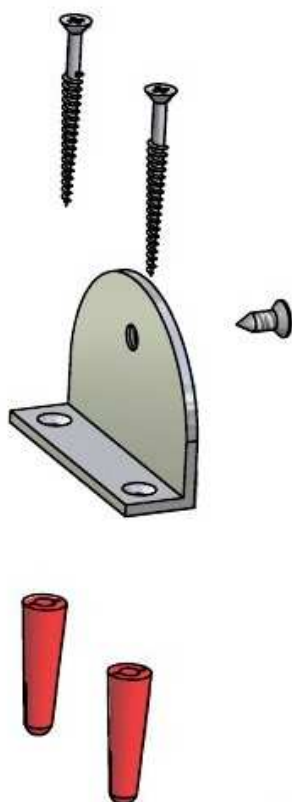

- 1 DETERMINE THE CENTRLINE ON THE WALL.
- 2 POSITION THE BRACKETS ON THE CENTRELINE AND MARK THE HOLE CENTRES.
- 3 DRILL THE HOLES AT $\varnothing 5.50\text{MM}$ TO A DEPTH OF AT LEAST 50.00MM.
- 4 INSERT THE WALL PLUGS AND SECURE THE BRACKETS USING THE SCREWS PROVIDED.
- 5 REPEAT STEP ONE AND TWO ON THE FASCIA.
- 6 PILOT DRILL THE HOLES ON THE FASCIA TO A MAXIMUM DEPTH OF 14MM TAKING CARE NOT TO BREAK THROUGH THE PANEL.
- 7 SECURE THE BRACKETS USING THE SCREWS PROVIDED.
- 8 OFFER THE PARTITION UP TO THE BRACKETS ENSURING THE HEIGHT AND LEVEL ARE CORRECT AND PILOT DRILL ENSURING NOT TO BREAK THROUGH THE PANEL.
- SECURE THE PARTITION TO THE BRACKETS USING THE SCREWS PROVIDED.

Atlas Washroom Systems Ltd, Darlington Road, West Auckland
County Durham, DL14 9PD
T 01388-830830 F 01388-830831 E info@atlas-washrooms.co.uk