




**PRODUCT SPECIFICATION FOR:
WM3/8**

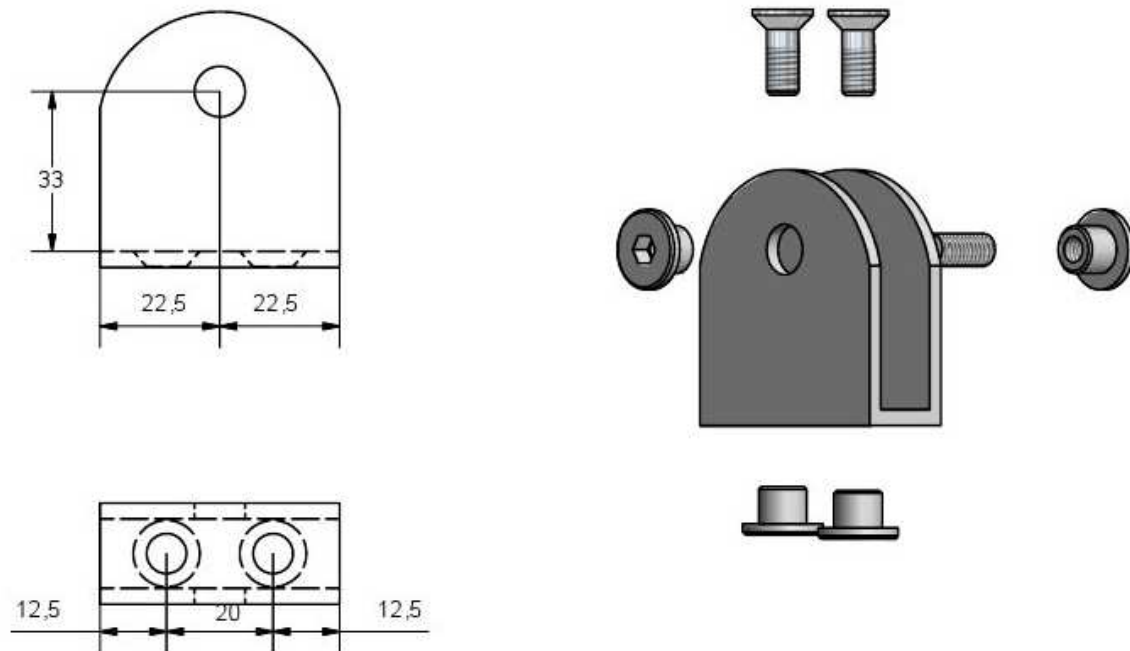

1. MARK THE CENTRE LINE ON THE FASCIA.
2. MARK THE HOLE CENTRE OF THE BRACKETS ON THE CENTRE LINE.
3. CAREFULLY DRILL THROUGH THE FASCIA USING A 9.50 MM DRILL.
4. SECURE THE BRACKETS USING THE M6 COUNTERSUNK SCREWS AND T-NUTS PROVIDED.
5. YOU CAN NOW OFFER UP THE FASCIA TO THE FORWARD END OF THE PARTITION UNTIL THE PANEL IS TIGHT TO THE BASE OF THE BRACKETS.
6. ENSURING THE HEIGHT AND LEVEL ARE CORRECT, THE FASCIA CAN BE FIXED TO THE PARTITION BY DRILLING THROUGH WITH A 9.50 MM DRILL, AND FIXING WITH THE T-NUTS AND ALL THREADS PROVIDED.

Atlas Washroom Systems Ltd, Darlington Road, West Auckland
County Durham, DL14 9PD
T 01388-830830 F 01388-830831 E info@atlas-washrooms.co.uk