

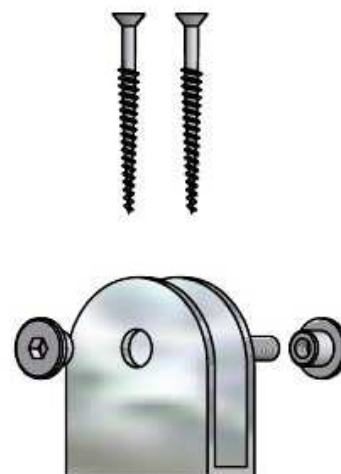


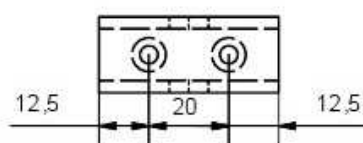

**PRODUCT SPECIFICATION FOR:
WM3/7**

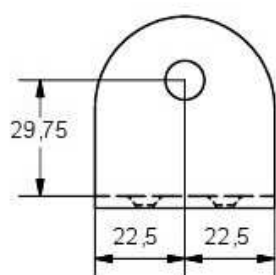

1. MARK OFF THE CENTRE LINE ON THE WALL.
2. POSITION THE BRACKETS ON THE CENTRE LINE.
3. MARK THE TWO HOLES PER BRACKET.
4. DRILL THE HOLES AT 5.5MM MINIMUM DEPTH 50.00MM.
5. SECURE THE BRACKETS USING THE WALL PLUGS AND SCREWS PROVIDED.
6. POSITION THE PARTITION IN THE BRACKETS.
7. DRILL THROUGH THE BRACKETS USING A 9.50MM DRILL.
8. SECURE THE PANEL TO THE BRACKETS USING THE T-NUTS AND ALL THREADS PROVIDED.

Atlas Washroom Systems Ltd, Darlington Road, West Auckland
County Durham, DL14 9PD
T 01388-830830 F 01388-830831 E info@atlas-washrooms.co.uk