


- Fit brackets to wall first
- Ensure all brackets are plumb

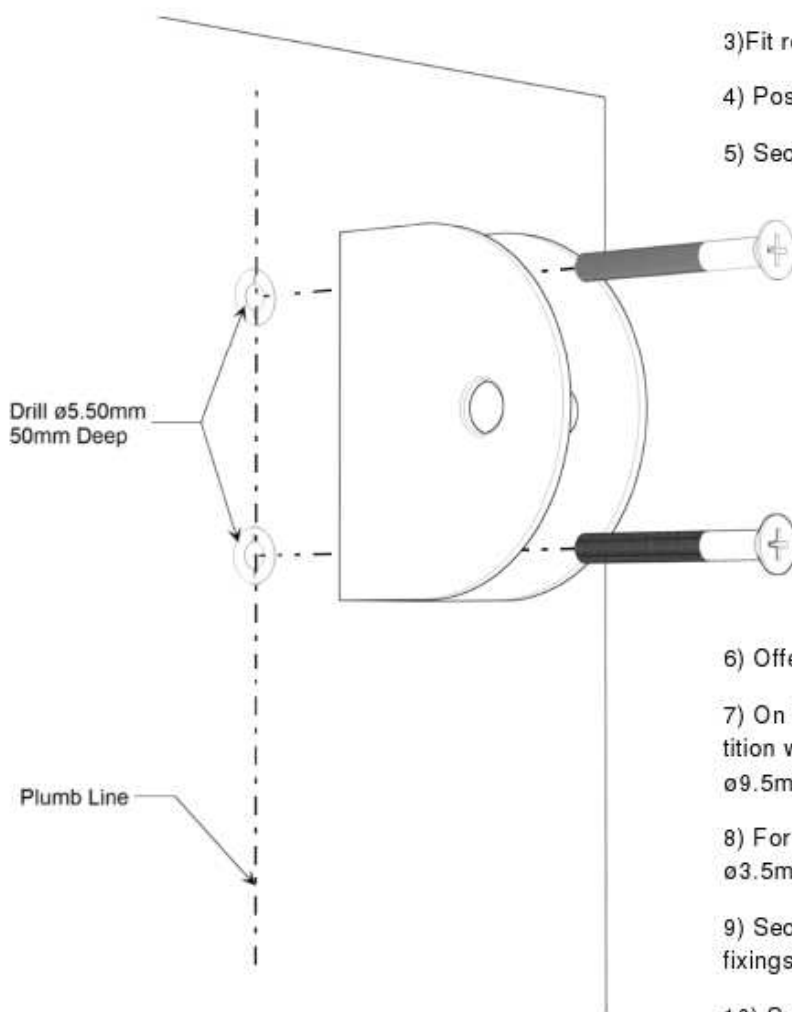

- 1) Mark hole positions.
- 2) Drill wall with ø5.5mm Drill to a depth of 50mm.
- 3) Fit red wall plugs into wall.
- 4) Position bracket on wall.
- 5) Secure with 2 x No.8 x 2" Woodscrews.

- 6) Offer up partition to brackets.
- 7) On Bolt through applications drill through partition with ø6.5mm for Anti Vandal fixings, ø9.5mm for T Nut fixings
- 8) For woodscrew applications pilot drill ø3.5mm, do not drill through partition.
- 9) Secure partition to bracket using supplied fixings.
- 10) Support other end of partition until ready to fit Centre Pilaster.