


Leg/Feet Assembly Instructions

PRODUCT SPECIFICATION SHEET FOR:
PS 2/7 LEG

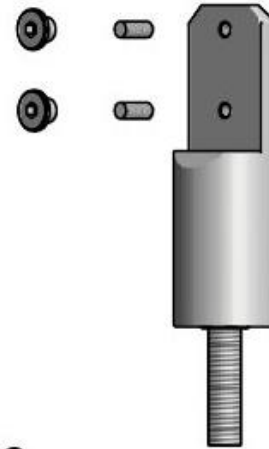

- 1 MARK OFF THE VERTICAL CENTRELINE OF THE LEG ONTO THE FASCIA AND DRILL THE $\varnothing 9.50\text{MM}$ HOLES FOR THE 'T' NUTS.
- 2 MARK THE POSITION OF THE FOOT ON THE FLOOR REMOVE THE LEG AND DRILL INTO THE FLOOR WITH A $\varnothing 5.5$ MASONRY DRILL 50.00MM DEEP.
- 3 SECURE THE FOOT TO THE FLOOR WITH THE WALL PLUG AND SCREW PROVIDED.
- 4 SET THE LEG TO THE REQUIRED HEIGHT AND PLACE ONTO THE FOOT SECURING WITH THE SMALL RETAINING SCREW.

