


Wall Bracket Assembly Instructions

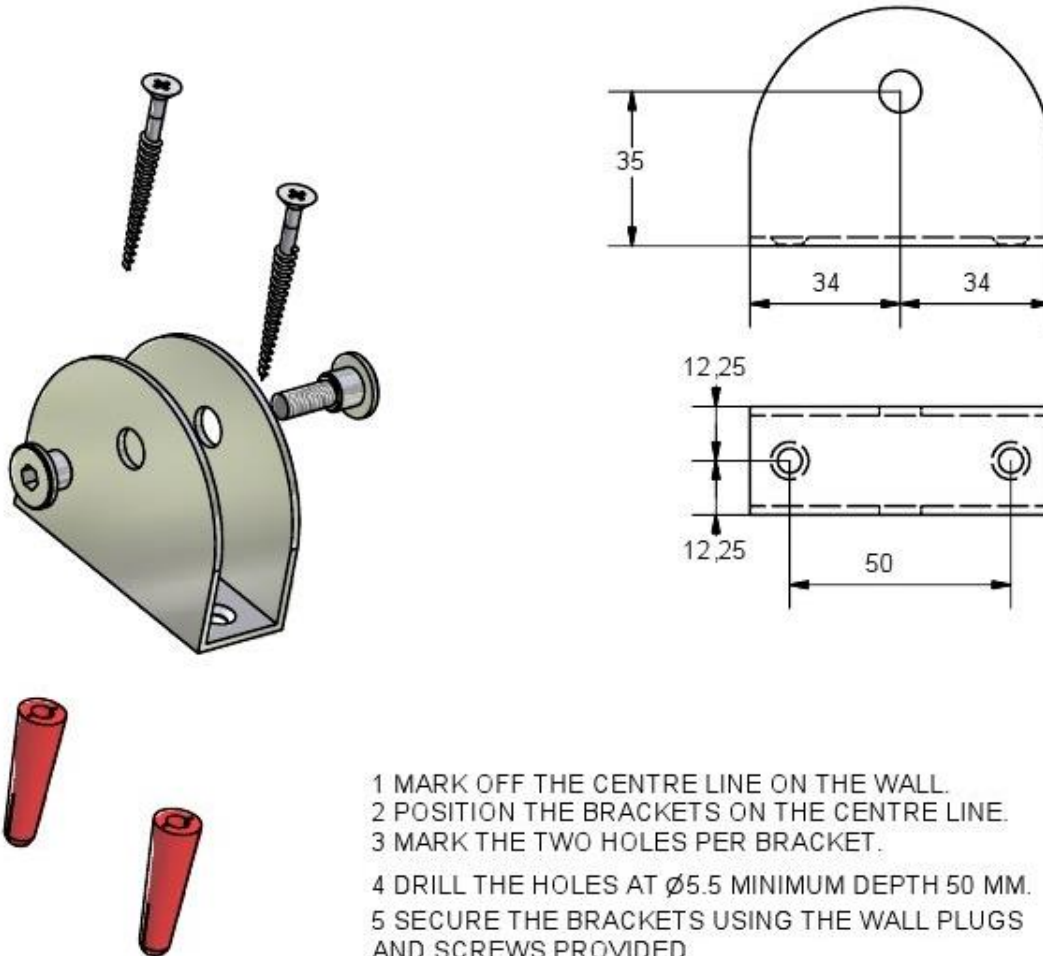

- 1 MARK OFF THE CENTRE LINE ON THE WALL.
- 2 POSITION THE BRACKETS ON THE CENTRE LINE.
- 3 MARK THE TWO HOLES PER BRACKET.
- 4 DRILL THE HOLES AT Ø5.5 MINIMUM DEPTH 50 MM.
- 5 SECURE THE BRACKETS USING THE WALL PLUGS AND SCREWS PROVIDED.
- 6 REPEAT STEPS ONE TO THREE ON THE FASCIA PANEL.
- 7 PILOT DRILL THE HOLES TAKING CARE NOT TO BREAK THROUGH THE FASCIA.
- 8 SECURE THE BRACKETS TO THE FASCIA WITH THE SCREWS PROVIDED.
- 9 POSITION THE PARTITION IN THE BRACKETS.
- 10 DRILL THROUGH THE BRACKETS USING A Ø9.50 MM DRILL.
- 11 SECURE THE PANEL TO THE BRACKETS USING THE T NUTS AND ALL THREAD PROVIDED.